



HERCULEAN STB/09 - 2 FOLDING WEIGHT BENCH WITH LEG UNIT&FLY

Assembly & User Manual

Please ensure that you read this manual carefully before attempting to assemble or use your new product and retain for future use

Contents

Section	Page
General Information	. 4
Before You Start	. 5
Safety	. 6
Exercise Information	. 7
Assembly	. 14



General Information

Quality

This exercise product has been designed and manufactured to comply with the latest (BS EN 957) British and European Safety Standards.

Questions

Should you encounter any difficulty with the assembly, operation or use of your exercise product or if you think that you may have parts missing, please DO NOT return it to your retailer but contact us first for help and advice, asking for CUSTOMER SUPPORT, by any of the following means

Tel:- 01535 637711 or Fax:- 01535 637722 or

Email:- support@benysports.co.uk Website: www.benysports.co.uk

CUSTOMER SUPPORT is open from 9.00am to 5.00pm from Monday to Friday

Beny Sports Co. UK Ltd. Unit 8, Riparian Way, The Crossings, Cross Hills, West Yorkshire BD20 7BW

Queries

If you do have any queries, please ensure that you have the following information ready for our Customer Support Staff:

YOUR NAME
YOUR ADDRESS
YOUR PHONE NUMBER
PRODUCT MAKE OR BRAND
PRODUCT MODEL
PRODUCT SERIAL NUMBER
DATE OF PURCHASE
NAME OF RETAILER
PART NUMBERS REQUIRED

Guarantee

Beny Sports Co. UK Ltd. guarantee's its product range for DOMESTIC USE ONLY.
For specific guarantee periods please consult the Guarantee Registration Card supplied with your product. During the Guarantee Period we have the right to: -

- a). provide parts for the purchaser to effect repair.
- b). repair the product returned (at the purchaser's cost) to our warehouse.
- c). replace the product if it is deemed economical to do so.

This guarantee applies to the original purchaser only and is not transferable.

This guarantee does not cover wear and tear on upholstery or consumables.

This guarantee does not cover abuse or defects caused by storage or use outside those intended.

If you need to advise us of a defect with your product, we will ask for proof of purchase. To enable us to service your requirement for replacement parts, you must return the enclosed Guarantee Registration Card within 14 days of purchase. Failure to do so will result in any claim for replacement parts or repairs being refused.

This does not affect your statutory rights as a consumer.

Customer Support

Tel:- 01535 637711 or Fax:- 01535 637722 or

Email:- support@benysports.co.uk Website: www.benysports.co.uk

CUSTOMER SUPPORT is open from 9.00am to 5.00pm from Monday to Friday

Beny Sports Co. UK Ltd. Unit 8, Riparian Way, The Crossings, Cross Hills, West Yorkshire BD20 7BW



Before You Start

Tools

To enable you to successfully assemble your product. You will require 1 x 13mm, 2 x 14mm, 2 x 17mm Combination Spanners and 1 x Screw Driver, you may also find it beneficial to have a Soft-Headed Hammer and perhaps an Adjustable Spanner handy as this may help.



Prepare the Work Area

It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and will reduce the possibility of injury during assembly.

Work with a Friend

You may find it quicker, safer and easier to assemble this product with the help of a friend as some of the components may be large, heavy or awkward to handle alone.

Open the Carton.

Carefully open the carton that contains your product, taking note of the warnings printed on the carton to ensure that the risk of injury is reduced. Be aware of sharp staples that may be used to fasten the flaps as these may cause injury. Be sure to open the carton the right way up, as this will be the easiest and safest way to remove all the components.

Unpack the Components

Carefully unpack each component, checking against the parts list that you have all the necessary parts to complete the assembly of your product.

Please note that some of the parts may be pre-fitted to major components, so please check carefully before contacting our CUSTOMER SUPPORT team.

In any event, please do not return the product to your retailer before contacting us first.



Safety

Before you undertake any programme of exercise that will increase cardiovascular activity please be sure to consult with your doctor. Frequent strenuous exercise should be approved by your doctor and proper use of your product is essential. Please read this manual carefully before commencing assembly of your product or starting to exercise.

- Please keep all children away from exercise products when in use. Do not allow children to climb or play on them when they are not in use.
- For your own safety, always ensure that there is at least 1 Metre of free space in all directions around your product while you are exercising.
- * Regularly check to see that all nuts, bolts and fittings are securely tightened. Periodically checking all moving parts for obvious signs of wear or damage.
- * Clean only with a damp cloth, do not use solvent cleaners. If you are in any doubt, do not use your product, but contact CUSTOMER SUPPORT by any of the means listed on the opposite page.
- * Before use, always ensure that your product is positioned on a solid, flat surface. If necessary, use a rubber mat underneath to reduce the possibility of damaging flooring or slipping in use.
- * Always wear appropriate clothing and footwear such as training shoes when exercising. Do not wear loose clothing that could become caught or trapped during exercise.



If any part of your product becomes damaged, broken or badly worn do not use the equipment until the defective parts have been replaced

Storage and Use

Your product is intended for use in clean dry conditions. You should avoid storage in excessively cold or damp places as this may lead to corrosion and other related problems that are outside our control.

Weight Limits

This product is suitable for users weighing a MAXIMUM of 110kg

The TOTAL WEIGHT LOADING on this product INCLUDING the user plus any weights and accessories is 200kg The MAXIMUM STATIC LOADINGS of the individual workstations are: -

Barbell Stands - 120kg* but not to exceed the 200kg TOTAL WEIGHT LOADING

Leg Extension - 35kg

Pec Deck (where fitted) - 25kg

Squat Stands (where fitted) - 80kg* to be used only with 50kg on the Leg Extension to provide balance Lat Tower (where fitted) - 35kg

DO NOT EXCEED THESE WEIGHT LIMITS AS DAMAGE MAY OCCUR TO THE PRODUCT & SERIOUS INJURY COULD RESULT

USER WEIGHT – kg	BARBELL WEIGHT LIMIT - kg
60kg	120kg
70kg	120kg
80kg	120kg
90kg	110kg
100kg	100kg
110kg	90kg

Conformity

This product conforms to: -BS EN ISO 20957 – 1 and BS EN 957 – 4 – Class (H) – HOME USE – Class (C) It is NOT suitable for therapeutic purposes



Beginning

How you begin to exercise will vary from person to person. If you have not exercised for a long period of time, have been inactive for a while, or are severely overweight you MUST start slowly, increasing your exercise time gradually, by perhaps only a few minutes for each session per week.

Combine a carefully structured nutritious diet with a simple but effective exercise routine and this can help make you feel better, look better and will almost certainly enable you to enjoy life more.

Aerobic Fitness

Aerobic exercise is simply defined as any sustained activity that increases the supply of oxygen to your muscles via the blood pumped by your heart. With regular exercise, your cardiovascular system will become stronger and more efficient. Your recovery rate i.e. the time taken for your heart to reach its normal resting level, will also

Initially you may only be able to exercise for a few minutes each day. Do not hesitate to breathe through your mouth should you need more oxygen. Use the "talk test". If you cannot carry on a conversation while exercising, you are working too hard! However, aerobic fitness will be gradually built up with regular exercise, over the next six to eight weeks.

Do not be discouraged if it takes longer than this to begin to feel less lethargic, everyone is different and some will achieve their targets quicker than others. Work at your own, comfortable pace and the results will come. The better your aerobic fitness the harder you will have to work to stay in your target zone.



Warm Up

A successful exercise programme consists of three parts, Warm Up, Aerobic Exercise and Cool Down. Never start a training session without warming up. Never finish one without cooling down correctly. Perform between five and ten minutes of stretching before starting your workout to prevent muscle strains, pulls and cramps.

Aerobic Exercise Session

Those new to exercise should exercise no more than every other day to start with.

As your fitness level increases, increase this to 2 in every 3 days.

When you are comfortable with your routine, exercise for 6 days per week. Always take at least one day off per week.

Exercising in your Target Zone

To ensure that your heart is working in its exercise target zone, you need to be able to take your pulse. If you do not have a pulse monitor (either from the product you are using or a proprietary independent unit) you will need to locate the pulse in your carotid artery. This is situated in the side of the neck and can be felt by using the index and middle fingers. Simply count the number of beats you feel in 10 seconds and then multiply by six to get your pulse rate. This should be taken before you start to exercise for easy reference.

People who have a greater aerobic fitness, have a lower resting pulse level and will also be able to exercise with a higher pulse level.

Target Zone

To determine your target zone, see the chart opposite. If you are new to exercise and by definition unfit, refer to the left column. If you exercise regularly and have good aerobic fitness, refer to the right column.

USERS AGE	UNCONDITIONED TARGET ZONE - A	CONDITIONED TARGET ZONE - B
(Years)	(Beats per Minute)	(Beats per Minute)
20-24 —	145 - 165 —	155 - 175
25-29 ———	140 - 160 —	150 - 170
30-34	135 - 155 —	145 - 165
35-39 ———	130 - 150 —	140 - 160
40-44	125 - 145 —	135 - 155
45-49 ———	120 - 140 —	130 - 150
50-54 ———	115 - 135 <i></i>	125 - 145
55-59 ———	110 - 130 —	120 - 140
60 and over —	105 - 125	115 - 135



Cool Down

To decrease fatigue and muscle soreness, you should also cool down by walking at a slow relaxed pace for a minute or so, to allow your heart rate to return to normal.


Warm Up and Cool Down Exercises

Hold each stretch for a minimum of ten seconds and then relax. Repeat each stretch two or three times. Do this before your Aerobic Exercise session and also after you have finished.



Head Roll


Rotate your head to the right for one count, feeling a slight pull on the left side of your neck. Next, rotate your head back for one count, stretching your chin. Then rotate your head to the left for one count, feeling a slight pull on the right side of your neck. Lastly, drop your head to your chest for one count. Repeat 2 to 3 times.

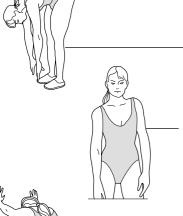

Shoulder Lift

Rotate and lift your right shoulder up towards your ear for one count. Relax then repeat for the left shoulder.

Repeat 3 - 4 times.

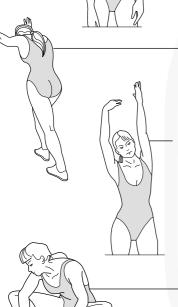

Side Stretch

Open both arms to the side and gently lift them above your head. Reach your right arm as high as you can for one count, gently stretching the muscles of the stomach and lower back. Repeat the action with your left arm. Repeat 3 - 4 times.

Toe Touch

Slowly bend forward from your waist, letting your back and shoulders relax as you lower your trunk. Gently stretch down as far as is comfortable and hold for 10 seconds.

Calf / Achilles Stretch

Turn towards the wall and place both hands on it. Support yourself with one leg while the other is placed behind you with the sole flat on the floor. Bend the front leg and lean towards the wall, keeping the rear leg straight so that the calf and Achilles tendon are stretched hold for 5 seconds. Repeat with the other leg.

Repeat 2 - 3 times.



Hamstring Stretch

Sit on the floor with your right leg extended and place your left foot flat against the right inner thigh. Stretch forward toward the right foot and hold for 10 seconds. Relax and then repeat with the left leg extended.

Repeat 2 - 3 times.

Inner Thigh Stretch

Sit on the floor and pull your legs toward your groin, the soles of your feet together. Hold your back straight and lean forward over your feet. Tighten the thigh muscles and hold for 5 seconds. Release and repeat 3 - 4 times.



Basic Aerobic Training Programme

For your basic Aerobic Exercise routine we suggest that you try the following. Remember, breathe correctly, exercise at your own pace and do not over-train as injury may result.

Week 1 & 2

Warm Up 5 - 10 Minutes Cool Down 5 Minutes Exercise 4 minutes at 'A' Rest 1 minute

Exercise 2 minutes at 'A' Exercise slowly 1 minute

Week 3 & 4

Warm Up 5 - 10 Minutes Cool Down 5 Minutes Exercise 5 minutes at 'A' Rest 1 minute Exercise 3 minutes at 'A'

Exercise slowly 2 minutes

Week 5 & 6

Warm Up 5 - 10 Minutes Cool Down 5 Minutes Exercise 6 minutes at 'A'
Rest 1 minute
Exercise 4 minutes at 'A'
Exercise slowly 3 minutes

Week 7 & 8

Warm Up 5 - 10 Minutes Cool Down 5 Minutes Exercise 5 minutes at 'A'
Exercise 3 minutes at 'B'
Exercise 2 minutes at 'A'
Exercise slowly 1 minute
Exercise 4 minutes at 'A'
Exercise slowly 3 minutes

Week 9 & beyond

Warm Up 5 - 10 Minutes Cool Down 5 Minutes Exercise 5 minutes at 'A'
Exercise 3 minutes at 'B'
Exercise 2 minutes at 'A'
Exercise slowly 1 minute
Repeat entire cycle 2 or 3 times

This is only a suggested programme and may not suit every individual's needs.



GETTING STARTED

You will often read about terms referring to exercise that may be confusing. Below are some of the definitions that are regularly used.

Repetition - Commonly referred to as 'REPS'.

This is a complete movement from start to finish.

Set - This is a complete number of consecutive repetitions.

i.e. 1 set of 10 reps.

Speed of Motion - This is the relative speed of movement for each rep.

Fast is considered as 1 rep / second. Medium is 1 rep / 2 seconds. Slow is 1 rep /

4 seconds.

Intensity - How 'hard' the exercise feels.

Low Intensity = easy exercise. High Intensity = hard exercise.



Incorrect or excessive training may damage your health. Please read the exercise information first.

TRAINING PROGRAMMES

You will achieve fast results, gaining a trimmer, fitter body if you follow these general rules

- * Exercise regularly do not skip workouts as consistency is the first key to success.
- * Do not be afraid perspire a little. This is a sign that you are working your body hard enough to give fast results. You will find 'hard' exercise enjoyable.
- * Set yourself realistic goals. Do not be over-ambitious. Plan your workouts to concentrate on specific body areas. Start slowly and gradually increase the intensity, reps and sets.

BEGINNERS PROGRAMME

This is a short suggested programme which we suggest you use for no more than 3 weeks, to be ideally performed every other day, but certainly not more than 4 times during the week.

This suggested routine is specifically for beginners or those who have not exercised for a considerable time. The programme is designed to provide general improvement in muscle tone, strength, flexibility and co-ordination.

As a beginner, you should start with no more than 2 sets of 6 exercises for the following reps on each of the Gyms training stations.

10 REPS - BENCH PRESS followed by LAT PULLDOWNS

5 REPS - PEC DEC

10 REPS - SHOULDER PRESS

10 REPS - LEG EXTENSIONS followed by LEG CURLS

- * Your rest interval between each set of reps should be 1 minute.
- * You should perform 2 SETS of each exercise.
- * Your exercise pace should be SLOW to MEDIUM.
- * This exercise programme should take you approximately 20 minutes.
- * Follow this exercise programme with 5 minutes of proper cool down exercises.



INTERMEDIATE EXERCISE

This is a slightly longer programme which we suggest you use for the next 6 - 8 weeks, to be ideally performed not more than 5 times during the week.

This suggested routine is specifically for intermediate users or those that are familiar with exercise routines. The programme is designed to increase muscle definition, build strength, aid flexibility and coordination.

The increase in exercise intensity and speed of repetitions is key to your success at this stage. For intermediate exercise we recommend 3 - 4 sets of 8 exercises for the following reps on each of the Gym's training stations.

15 REPS - BENCH PRESS followed by LAT PULLDOWNS

10 REPS - PEC DEC

15 REPS - SHOULDER PRESS

15 REPS - LEG CURLS

15 REPS - LEG EXTENSIONS followed by ARM CURLS

- * Your rest interval between each set of reps should be 1 minute.
- * You should perform 3 4 SETS of each exercise.
- * Your exercise pace should be MEDIUM to FAST.
- * This exercise programme should take you approximately 35 40 minutes.
- * Follow this exercise programme with 5 minutes of proper cool down exercises.

ADVANCED TRAINING

This is an open-ended programme, ideally performed not more than 4 times during the week, preferably on alternate days.

This suggested routine is specifically for advanced users or those that are familiar with exercise routines. The programme is designed to increase muscle mass and build strength.

The increase in exercise intensity, resistance levels and speed of repetitions is key to your on going success

For advanced training we recommend 4 sets of the 9 exercises for the following reps on each of the Gym's training stations. However at this stage you may want to concentrate on specific body parts, so as you are now fully familiar with the workings of your Gym you should be able to structure an exercise programme to suit your own individual needs. Any specific advice should be sought through specialist books.

20 REPS - BENCH PRESS followed by LAT PULLDOWNS

15 REPS - PEC DEC

15 REPS - SHOULDER PRESS

15 REPS - LEG CURLS

20 REPS - LEG EXTENSIONS followed by ARM CURLS

15 REPS - LEG PRESS


10 SLOW REPS - 2 SETS - SIT UPS

- * Your rest interval between each set of reps should be 1 minute.
- * You should perform 4 SETS of each exercise.
- * Your exercise pace should be MEDIUM to FAST.
- * This exercise programme should take you approximately 40 50 minutes.
- * Follow this exercise programme with 5 minutes of proper cool down exercises.

Exercise Notes




Use this space to record your own exercise routine results.

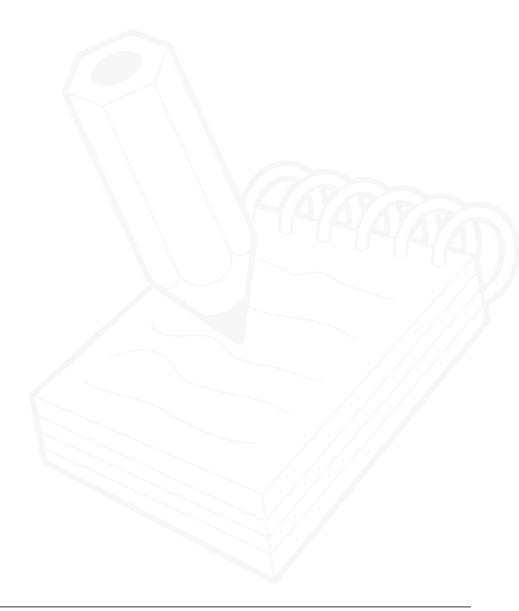

ACCESSORY FITMENT LIST

The are all the accessories you will need to complete the assembly of your product.

The following accessories are supplied in a pack and should be checked before attempting assembly.

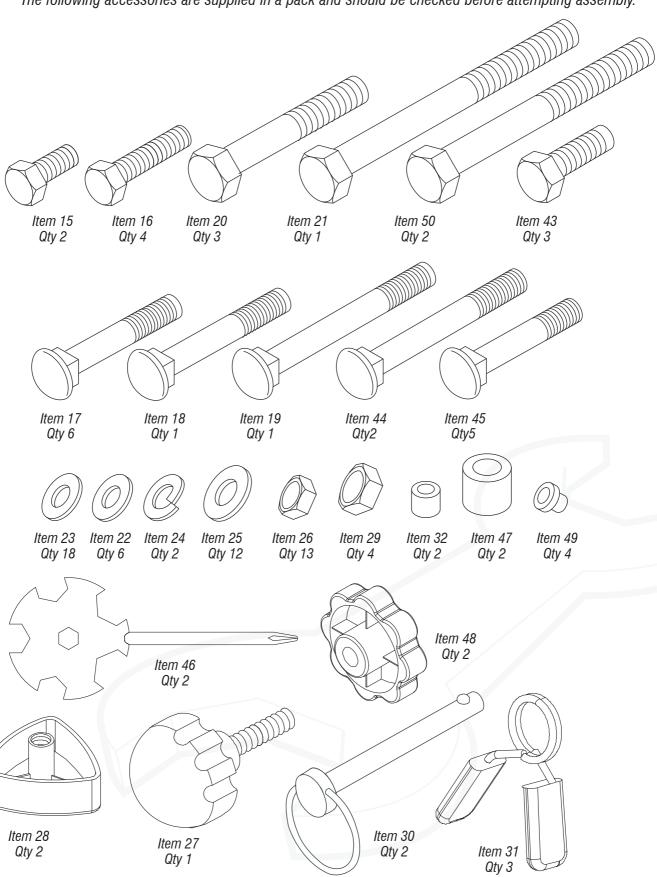



Beny Sports Co. UK Ltd Unit 8, Riparian Way, The Crossings, Cross Hills, West Yorkshire. BD20 7BW Carefully unpack each component, checking against the parts list that you have all the necessary parts to complete the assembly of your product.

Please note that some of the parts may be pre-fitted to major components, so please check carefully before contacting our CUSTOMER SUPPORT team.

In any event, please do not return the product to your retailer before contacting us first.

Tel:- 01535 637711 or Fax:- 01535 637722 or

E-mail:- support@benysports.co.uk

CUSTOMER SUPPORT is open from 9.00am to 5.00pm from Monday to Friday



Do not fully tighten at this stage.


Do NOT FULLY TIGHTEN any Bolts, Nuts or Fittings at this stage unless specifically instructed to do so. Connect both Uprights (2) to the Upright Support Bar (3) using $4 \times M8 \times 50$ mm Carriage Bolts (17) fitted from the inside as per illustration, $4 \times M8$ Flat Washers (23) and $4 \times M8$ Nylon Locknuts (26).

Place both Uprights (2) on the outside of the Rear Stabiliser (1) and secure in place using 2 x M8 x 85mm Carriage Bolts (44) fitted from the outside, 2 x M8 Flat Washers (23) and 2 x M8 Nylon Locknuts (26).

Now attach both Stabiliser Brackets (13) to the outside of the Rear Stabiliser (1) and to the inside of both Uprights (2) using 2 x M8 x 50mm Carriage Bolts (17), 2 x M8 Flat Washers (23) and 2 x M8 Nylon Locknuts (26) and from the inside of the Rear Stabiliser (1) using 2 x M8 x 45mm Carriage Bolts (45), 2 x M8 Flat Washers (23) and 2 x M8 Nylon Locknuts (26). Insert both Barbbell Locking Pins (30) through the holes in the top of both Uprights (2) as shown below.

Assembly Accessories 1

PART No. DESCRIPTION QTY 17 M8 x 50mm CARRIAGE BOLT .6 23 M8 FLAT WASHER .10 26 M8 NYLON LOCKNUT .10 30 BARBELL LOCKING PIN .2 44 M8 x 85mm CARRIAGE BOLT .2 45 M8 x 45mm CARRIAGE BOLT .2

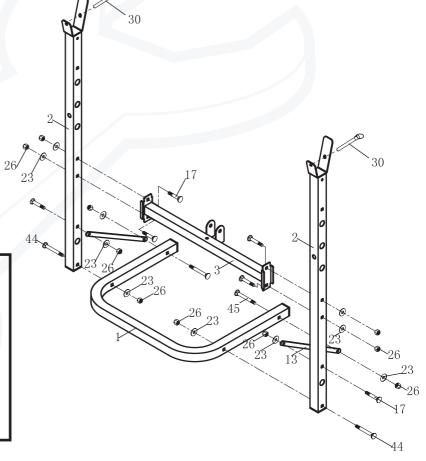





Note

The highest position will give the greatest intensity during exercise.


Connect the REAR of the Main Frame (4) to the assembled Upright Support (3) using 1 x M10 x 60mm Hex Bolt (20), 2 x M10 Flat Washers (25) and 1 x M10 Nylon Locknut (29) bolted from the SIDE.

Place an M8 x 90mm Carriage Bolt (19) in the UPPER hole on the rear of the Main Frame (4) and through the hole in the Upright Support (3), secure in position using 1 x M8 Flat Washer (23), 1 x M8 Spring Washer (24) and 1 x M8 Locking Knob (Female) (28). Tighten securely to lock the frame in position.

Fit the Front Stabiliser (5) to the Leg Extension Upright (6) and secure with 3 x M8 x 15mm Hex Bolts (43) and 3 x M8 Flat Washers (23). Connect the assembled Leg Extension Upright to the FRONT of the Main Frame (4) using 1 x M10 x 60mm Hex Bolt (20), 2 x M10 Flat Washers (25) and 1 x M10 Nylon Locknut (29) bolted from the SIDE. Place an M8 x 55mm Carriage Bolt (18) in the UPPER hole on the front of the Main Frame (4) and through the hole in the Upright Support (3) using 1 x M8 Flat Washer (23), 1 x M8 Spring Washer (24) and 1 x M8 Locking Knob (Female) (28). Tighten securely to lock the frame in position.

Fit the Leg Extension Support (7) into the Leg Extension Upright (6) to any one of 3 positions and lock in position using the M8 Locking Knob (27).

Assemble the Leg Extension (8) to the Leg Extension Support (7) using 1 x M10 x 60mm Hex Bolt (20),2 x M10 Flat Washers (25) and 1 x M10 Nylon Locknut (29) bolted from the SIDE.

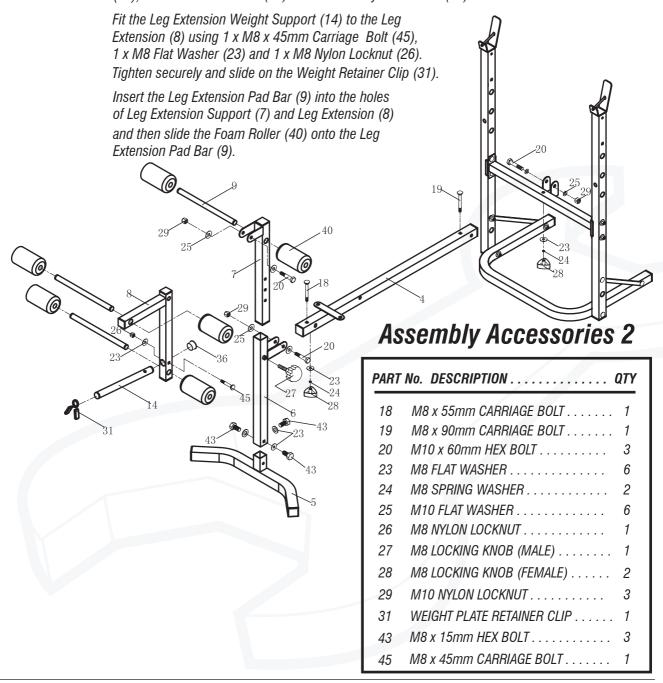



3

Note

The Backrest Support Bushings should be placed between the Backrest Supports and the Main Frame during assembly. This will Flat Washers (22). ensure that there is minimal sideways movement on the Backrest during use.


The Backrest Can be seen to the Please ensure that Supports and is an experiment of the seen to the seen to the please ensure that the seen to the please ensure that the pl

Connect the Backrest Supports (11) to the Main Frame (4) using the fittings in the following sequence. 1 x M10 x 130mm Hex Bolt (21), 1 x M10 Flat Washer (25), 1 x Backrest Support (11), 1 x Backrest Support Bushing (32) on one side of the Main Frame (4), then 1 x Backrest Support Bushing (32), 1 x Backrest Support (11), 1 x M10 Flat Washer (25) and 1 x M10 Nylon Locknut (29) on the other side of the Main Frame (4). DO NOT tighten fully at this stage.

Fit the Backrest (41) to the Backrest Supports (11) using 4 x M6 x 40mm Hex Bolts (16) and 4 x M6 Flat Washers (22). Now tighten the M10 x 130mm Hex Bolt to remove all free-play but take care NOT to overtighten.

Backrest Supports and the Main Fit the Seat (42) to the seat bracket (4) using 2 x M6 x 16mm Hex Bolts (15) and 2 x M6 Frame during assembly. This will Flat Washers (22).

The Backrest can be adjusted into 4 positions for convenient use. (Flat and 3 Inlcine Positions). Please ensure that the Backrest Adjustment Rod (10) is positioned UNDER the Backrest Supports and is secured into place in any one of the 3 adjustement holes in the Uprights before use.

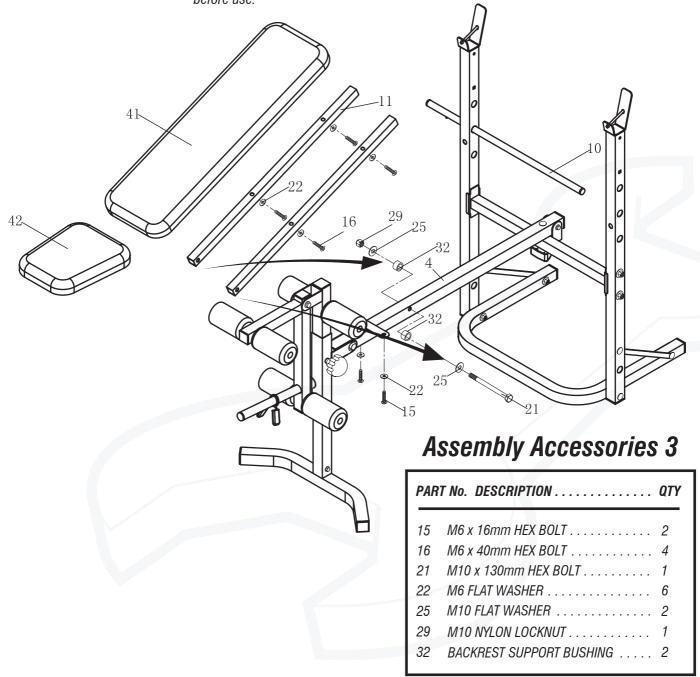



Slide a Butterfly Arm Pad Bar (52) into each Butterfly Arm (51), now slide 1 x Foam Roller (40) onto each Butterfly Arm Pad Bar (52).


Fit a Weight Support (14) to each Butterfly Arm using 1 x M8 x 45mm Carriage Bolt (45), 1 x M8 Flat Washer (23) and 1 x M8 Nylon Locknut (26). Tighten securely and slide on the Weight Plate Retainer Clip (31).



Now fully tighten all nuts and bolts.

Fit 2 x Butterfly Arm Bolt Bushings (49) to each Upright - 1 each side of each Upright. Pass an M10 x 125mm Hex Bolt (50) through an M10 Flat Washer (25) and then through the front face of an assembled Butterfly Arm. Slide on a Plastic Spacer (47) then fit the assembly to the appropriate Upright.


Secure the assembly in place with **either:** - 1 x M10 Flat Washer (25) and M10 Locking Knob (Female) (48).

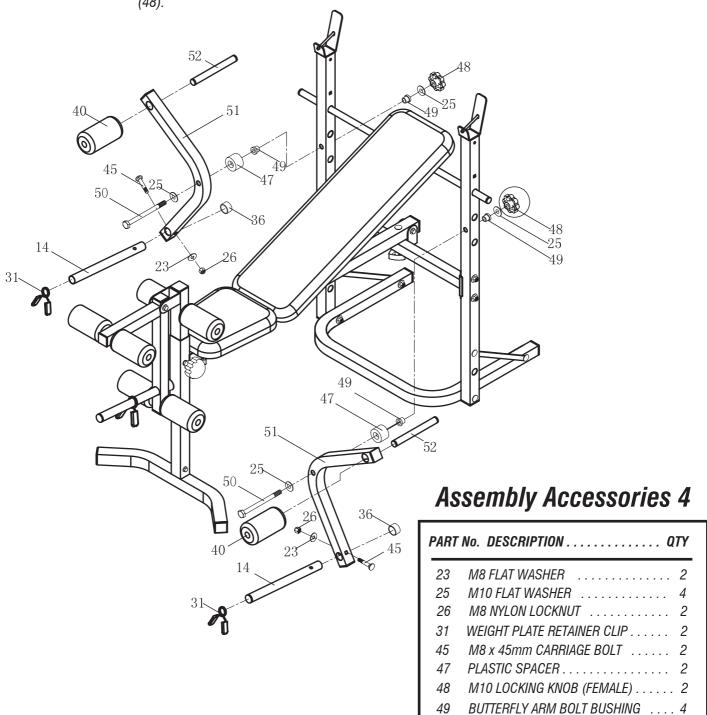

M10 x 125mm HEX BOLT 2




Securely tighten ALL bolts and other fixings and your Weight Training Bench is ready to use.

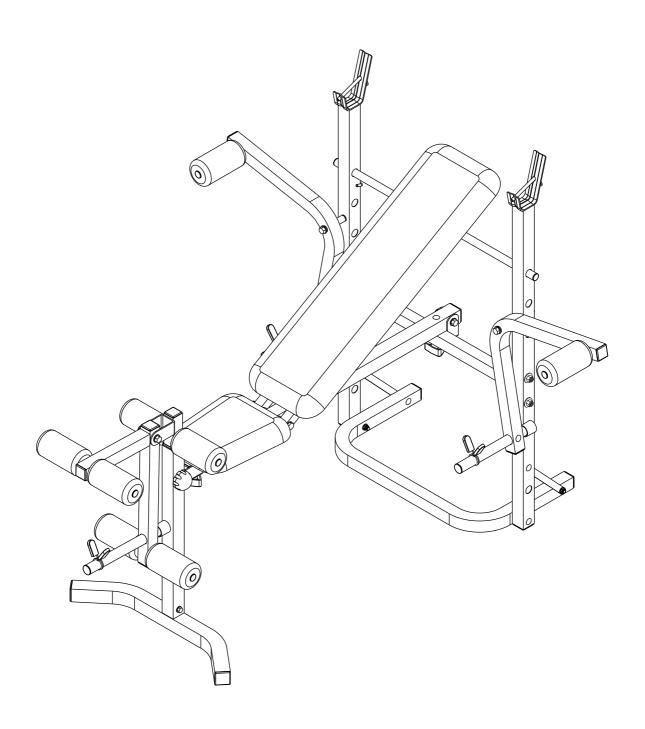



FOLDING THE BENCH FOR STORAGE

1 Unscrew the REAR M8 Locking Knob (Female) (28) and remove the M8 x 90mm Carriage Bolt (19), M8 Flat Washer (23) and M8 Spring Washer (24).

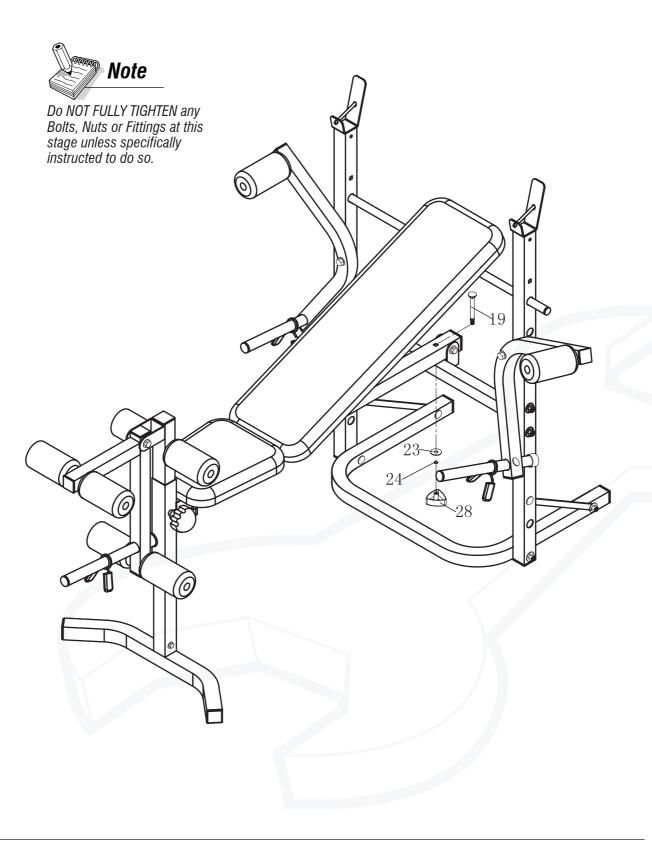


FOLDING THE BENCH FOR STORAGE


Lift the front of the Main Frame. Remove the Leg Extension Assembly by unscrewing the M8 Locking Knob (Male) (27). Place this assembly to one side.

Now unscrew the FRONT M8 Locking Knob (Female) (28) along with 1 x Flat Washer (23), 1 x Spring Washer


(24) and fold down the Front Upright Assembly.

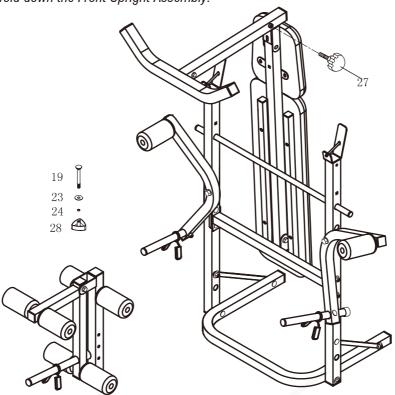

3 Please ensure that the Bench is securely stored in either an upright or full flat position away from Children.

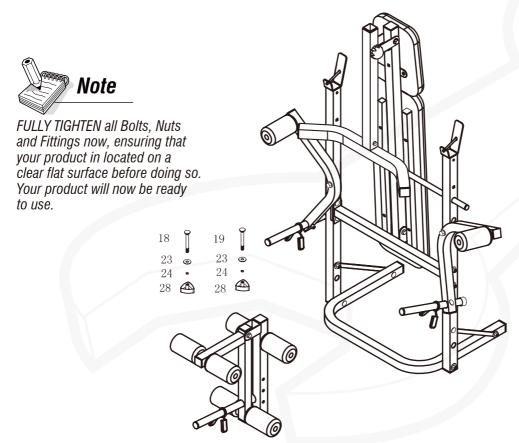



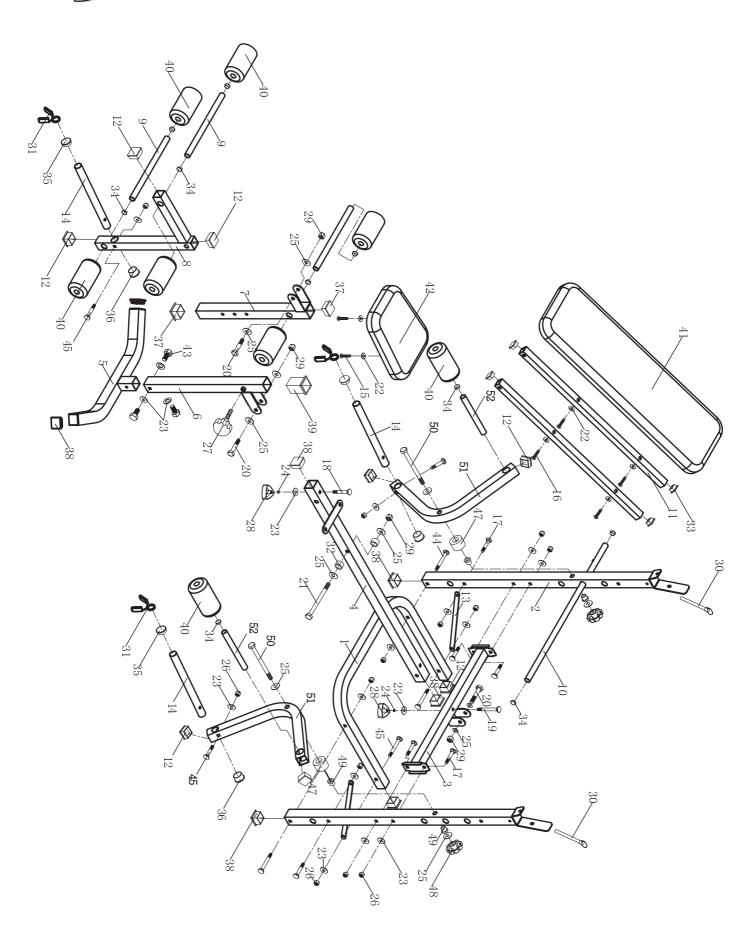



PART	No.	DESCRIPTION	QTY			
1	RE/	IR STABILISER	1	28	M8 LOCKING KNOBS (FEMALE)	2
2	UPF	RIGHTS	2	29	M10 NYLON LOCKNUTS	4
3	UPR	RIGHT SUPPORT BAR	1	30	BARBELL LOCKING PINS	2
4	MAI	N FRAM E	1	31	WEIGHT PLATE RETAINER CLIP	3
5	FRC	ONT STABILISER	1	32	BACKREST SUPPORT BUSHINGS	2
6	LEG	EXTENSION UPRIGHT	1	33	RECTANGULAR END CAPS	
7	LEG	EXTENSION SUPPORT	1		25mm x 25mm	4
8	LEG	EXTENSION	1	34	ROUND END CAPS 19mm	10
9	LEG	EXTENSION PAD BARS	3	35	ROUND END CAP 25mm	3
10	BAC	KREST ADJUSTMENT ROD	1	36	ROUND END OVER-CAP 25mm	3
11	BAC	KREST SUPPORTS	2	37	SQUARE END CAPS 32mm	2
12	SQL	IARE END CAPS 33.4mm	9	38	SQUARE END CAPS 38mm	6
13	STA	BILISER BRACKETS	2	39	SQUARE INTERNAL BUSHING 38mm	1
14	WEI	GHT SUPPORT BAR	3	40	FOAM ROLLERS	8
15	M6 .	x 16mm HEX BOLTS	2	41	BACKREST	1
16		x 40mm HEX BOLTS		42	SEAT	1
17	M8 .	x 50mm CARRIAGE BOLTS	. 6	43	M8 x 15mm HEX BOLTS	3
18	M8 .	x 55mm CARRIAGE BOLT	1	44	M8 x 85mm CARRIAGE BOLTS	
19	M8 .	x 90mm CARRIAGE BOLT	1	<i>45</i>	<i>M8 x 45mm CARRIAGE BOLTS</i>	5
20	M10	x 60mm HEX BOLTS	. 3	46	SPANNER + SCREW DRIVER	2
21	M10	0 x 130mm HEX BOLT	1	47	PLASTIC SPACERS	2
22	M6	FLAT WASHERS	6	48	M10 LOCKING KNOBS (FEMALE)	2
23		FLAT WASHERS		49	BUTTERFLY ARM BOLT BUSHINGS	4
24		SPRING WASHERS		50	M10 x 125mm HEX BOLTS	
25) FLAT WASHERS		51	BUTTERFLY ARMS	
26		NYLON LOCKNUTS		52	BUTTERFLY ARM PAD BARS	2
27	M8 L	LOCKING KNOB (MALE)	1			



Note

Some of the above accessories are pre-fitted to the master component. They may not be supplied separately





Beny Sports Co. UK Ltd.

Unit 8, Riparian Way, The Crossings, Cross Hills, West Yorkshire BD20 7BW

CUSTOMER SUPPORT

is open from 9.00am to 5.00pm from Monday to Friday



Tel: 01535 637711



Fax: 01535 637722



E-mail: support@benysports.co.uk



Website: www.benysports.co.uk